




M01

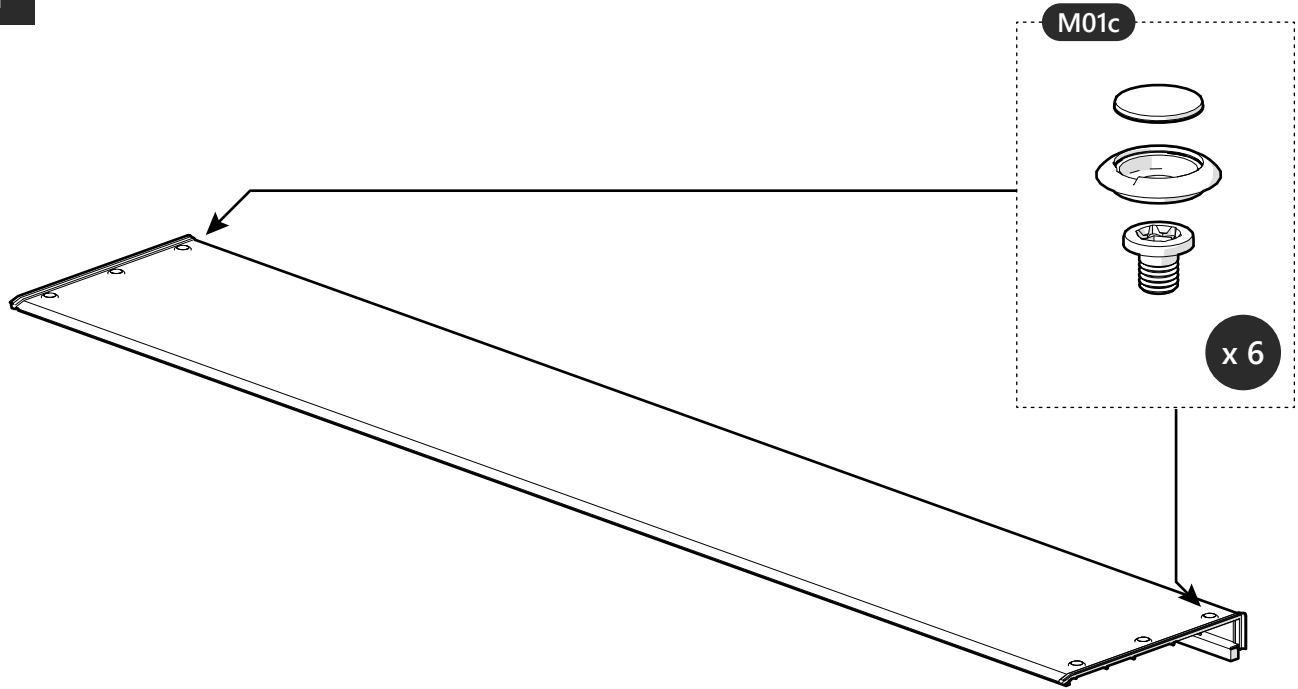


M02

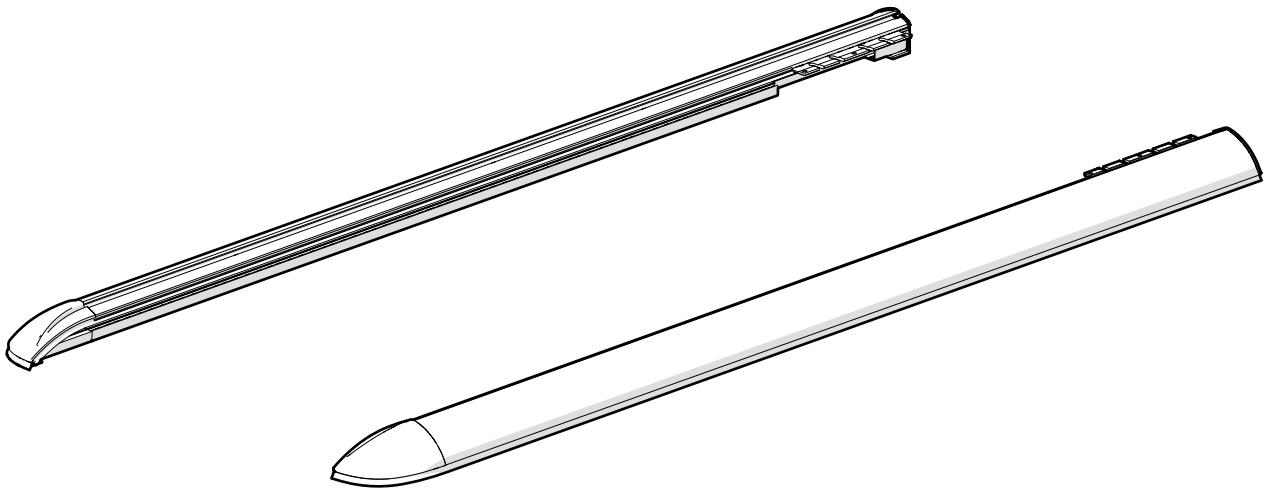


**M03**

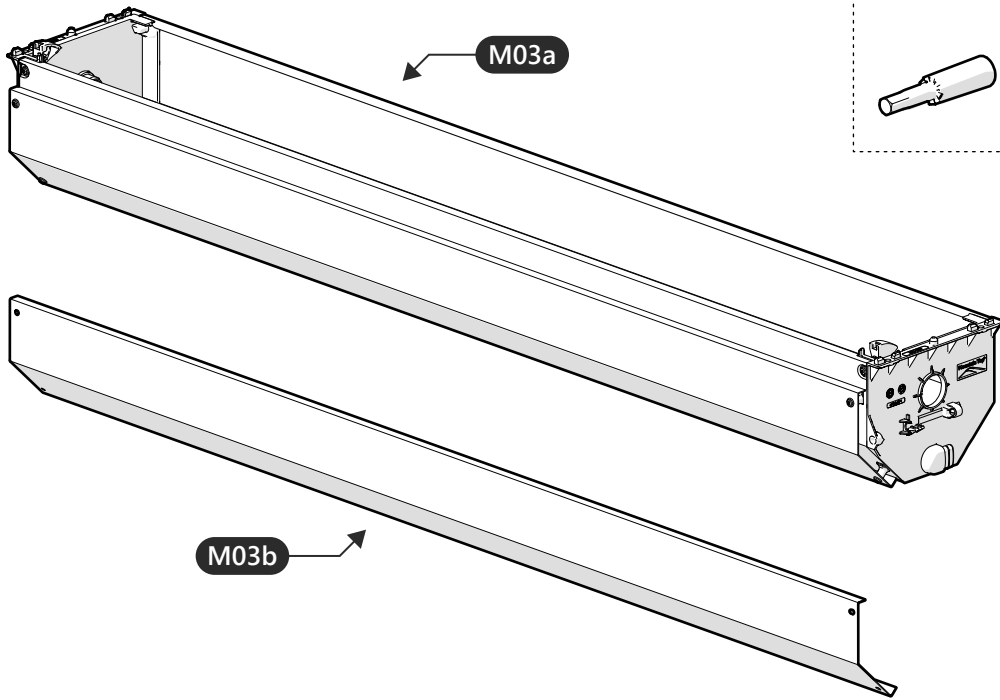


**M04**

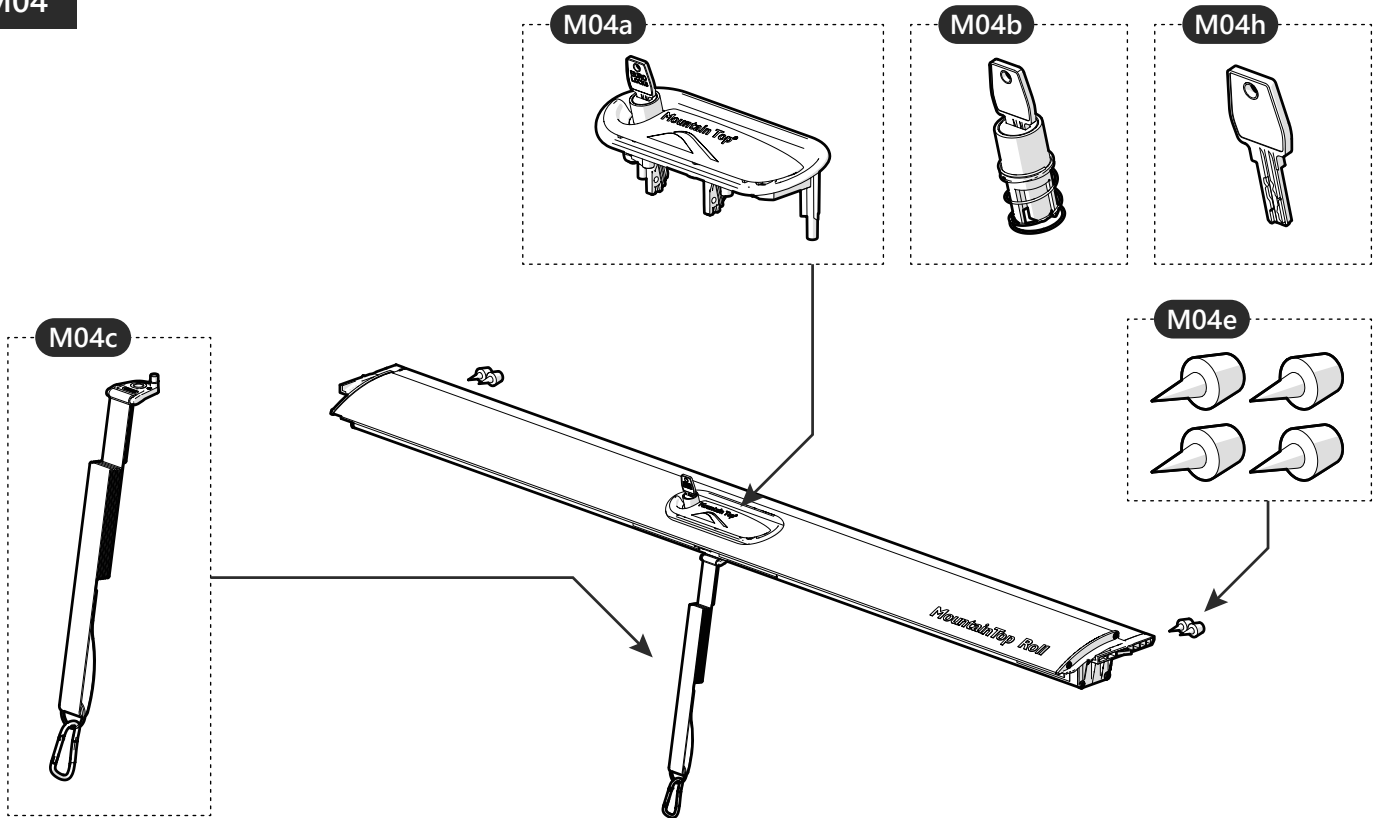


### M06

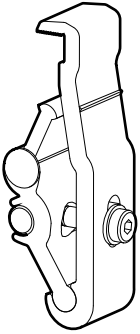


**M06c** x 1  
FORD

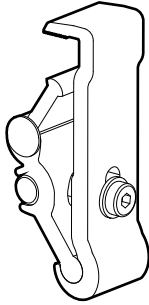


**M06d** x 1  
TOYOTA  
ISUZU

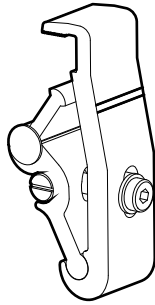


**M06e** x 1  
VOLKSWAGEN

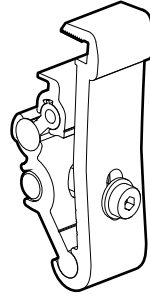

**M06f** x 1  
NISSAN

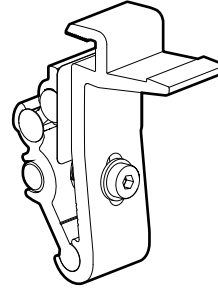


**M06g** x 1  
TOYOTA

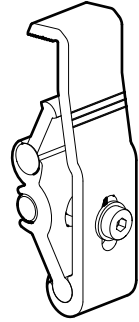


**M06h** x 1  
MITSUBISHI

### M07


**M07e**

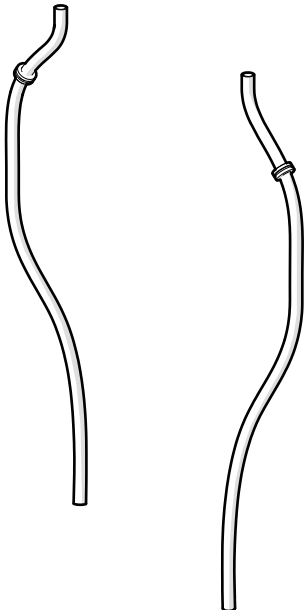

**M07c**

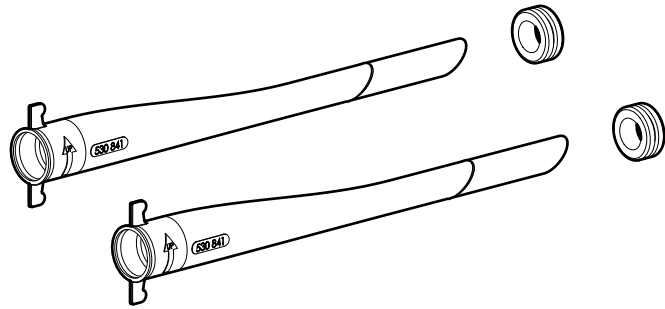


**M07d**

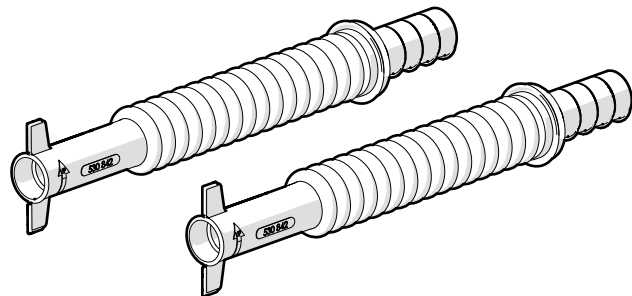


M08




x 6

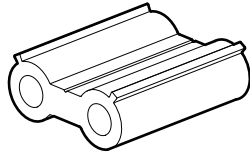


x 6

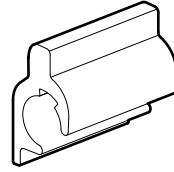


x 6

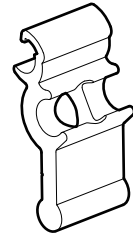

x 6

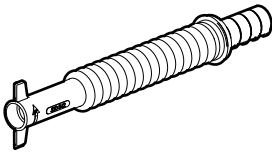


x 2




x 12 / x 24




x 6




x 6

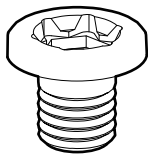


x 6

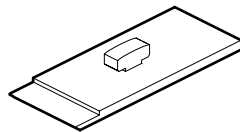


x 2

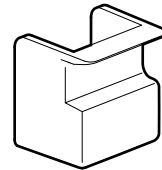


x 2




x 1

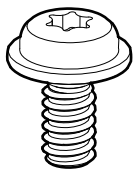

x 4

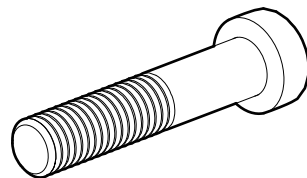


x 6

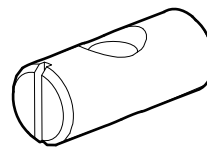


x 6



x 6

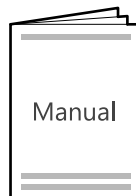

x 1

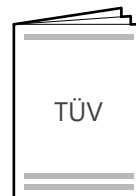

x 1



The contents of the kit may vary for different car models